

CANDY

Bianca



Download the
Candy Simply-Fi App



EN

6. WI-FI

This appliance is equipped with **Wi-Fi** technology that allows you to control it remotely via App, thanks to Wi-Fi function.

Get all the details of the Wi-Fi functions by browsing the App in DEMO mode.

MACHINE ENROLLMENT (ON APP)

- Download the ***Candy simply-Fi*** App on your device.

The *Candy simply-Fi* App is available for devices running both Android and iOS, both for tablets and for smartphones.

- Open the App, create the user profile and enroll the appliance following the instructions on the device display or the "**Quick Guide**" attached on the machine.

ENABLE REMOTE CONTROL (VIA APP)

After the machine enrollment, every time you want to manage it remotely through the App, firstly you have to load the laundry, the detergent, close the door and select the **Wi-Fi** position on the machine. From that moment on you can manage it through the App commands.

7. QUICK USER GUIDE

This washing machine automatically adjusts the level of the water to the type and quantity of washing. This system gives a reduction in energy consumption and a saving in washing times.

Program selection

- Turn on the appliance and select the required program.
- Adjust the washing settings if necessary and select the required options.

DRYING (WASHER-DRYERS only)

If you would like the drying cycle to begin automatically after washing, select the washing program required and select the drying cycle by the "SET" button. Or you can finish the wash and then select the drying program.

- Press the **START/PAUSE** button to start the program.
- At the end of the program, the message "END" will appear on the display
- Turn off the washing machine.

For any type of wash, see the program table and follow the operating sequence as indicated.

Technical data


Water pressure:

min 0.05 Mpa / max 0.8 Mpa
(0.05 MPa dispenses approximately 1 litre of water in 10 seconds)

Spin r.p.m.: See rating plate.

Power input / Power current fuse amp / Supply voltage: See rating plate.

8. CONTROLS AND PROGRAMS

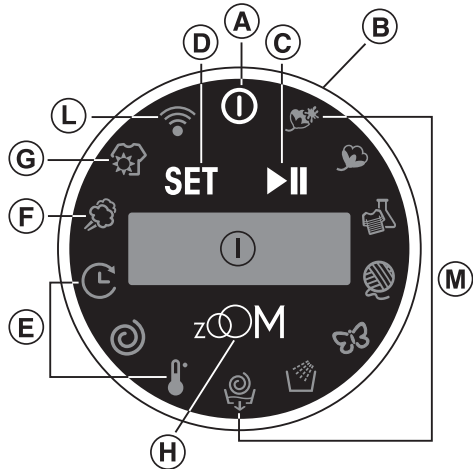

- A** ON/OFF button
- B** SMART RING (ring for selecting PROGRAMMES/OPTIONS)
- C** START/PAUSE button
- D** SET/CONFIRM button
- E** OPTION area
- F** Program/option STEAM
- G** Program/option DRYING SELECTION
- H** ZOOM function button
- D+H** CHILD LOCK
- I** DISPLAY
- L** Wi-Fi position/Wi-Fi indicator light
- M** PROGRAMME area



WARNING:

Do not touch the display while fitting the plug, because during the initial seconds, the machine performs a self-calibration that might be interrupted: if this occurs, the machine may not operate properly. In this case, remove the plug and repeat the operation.

ON/OFF button

- To turn the appliance on and off, press the **ON/OFF** button.

At the end of the cycle, do not forget to turn off the appliance by the **ON/OFF** button, disconnect the plug and close the water faucet.

First starting

Language setting

- After connecting the machine to the network and turning it on, turn the **"SMART RING"** to display the available languages.
- Select the desired language by turning the **"SMART RING"** and confirm by pressing **"SET"**. From now on, you can select and start programs.

Change the language

If you want to change the setting language you will have to hold the **"SET"** button down for **5 seconds**. The welcome message will appear on the display, and by turning the **"SMART RING"** you will be able to choose a new language.

Through this process all saved settings will be cancelled.

SMART RING (ring for selecting PROGRAMMES/OPTIONS)

- After turning the appliance on, rotating the **"SMART RING"** the icons for the programmes will light up and the display will show the description and the relevant parameters.
- To start the selected cycle with the preset parameters, press **START/PAUSE**.

When the appliance is turned on again, the last programme will be shown, memorising the previously set values.

- If the selected programme is to be modified, press **"SET"** and rotate the **"SMART RING"** next to the icon of the selected option; then, press **"SET"** again.
- Rotating the **"SMART RING"** you can display the available selections for the set option. To confirm press **"SET"**, then press **START/PAUSE** to start the cycle or repeat the operation for other options.

Only the options compatible with the set programme can be selected.

To cancel the program selection, turn the **"SMART RING"** to the program area and press **"SET"**.

When the programme is running, the display will show the time to elapse. Rotating the **"SMART RING"** all information about the cycle will be displayed.

START/PAUSE button

Close the porthole **BEFORE** pressing the **START/PAUSE** button.

- Press to start the set cycle.

After starting the washing machine you need to wait a few seconds before the appliance starts the programme.

To prevent damage to the fabrics, it is not possible to increase the temperature above the maximum value set for each programme.

CYCLE DURATION

- When a programme is selected the display automatically shows the cycle duration, which can vary, depending on the options selected.
- Once the programme has started you will be kept informed constantly of the time remaining to the end of the wash.
- The appliance calculates the time to the end of the selected programme based upon a standard loading, during the cycle, the appliance corrects the time to that applicable to the size and composition of the load.

ADD OR REMOVE ITEMS AFTER THE PROGRAMME HAS STARTED (PAUSE)

- Press **START/PAUSE** (the display shows **PAUSE**).

Ensure that the water level is below the porthole before opening it, to prevent any flooding.

- After adding or removing items, close the porthole and press **START/PAUSE** (the programme will resume from when it was interrupted).

CANCELLING THE SET PROGRAMME

- To cancel the programme, press the **ON/OFF** button for about **2** seconds until the display switches off.

OPTION area

The options must be selected before pressing the **START/PAUSE** button.

- TEMPERATURE

- By this option you can change the temperature of the washing cycles.

- SPIN

- By this option you can reduce the maximum spin speed for the set programme, until it is completely excluded.
- If the label does not show any instructions, you can spin to the maximum speed set for the programme.

To prevent damage to the fabrics, it is not possible to increase the speed over the maximum one set for each

- It is possible to modify the spin speed at any time, without shifting the machine to **PAUSE**.

An over dosing of detergent can cause excessive foaming. If the appliance detects the presence of excessive foam, it may exclude the spinning phase or extend the duration of the programme and increase water consumption.

The machine is fitted with a special electronic device, which prevents the spin cycle should the load be unbalanced. This reduces the vibration, improves noise reduction and prolongs the life of the washing machine.

- DELAY START

- By this option you can programme the start of the washing cycle.
- Selecting the dedicated icon by the **"SET"** button you can set a delay from **1 hour** to max. **24 hours**.
- Confirm pressing the **"SET"** button.

- Press **START/PAUSE** to start the counting at the end of which the programme will automatically start.
- The delay start can be cancelled, pressing the **ON/OFF** button for about **2 seconds**, until the display switches off.

- STEAM

- By this option you can add a specific steam treatment to some washing cycles (see programme table).
- The steam function relaxes the folds and makes ironing times shorter.
- Fibres are regenerated and refreshed, removing all smells from the items.
- A dedicated steam treatment was devised for each programme, to guarantee washing top efficiency depending on item fabrics and colours.

Start steam function as a dedicated program:

- Turn the **"SMART RING"** directly to the dedicated icon, at the program selection stage, to start one of the steam treatments available.
- Press the **"SET"** button and select through the **"SMART RING"** the desired program (see program section for details).
- Confirm by pressing the **"SET"** button again.
- Start with the **START/PAUSE** button.

- DRYING SELECTION

Automatic washing/drying cycle:

- Select the washing program according to laundry type.
- Press the **"SET"** button and turn the **"SMART RING"** at the drying icon.

- Press the **"SET"** button to select through the **"SMART RING"** the available degree of drying.
- Confirm by pressing the **"SET"** button again.
- Start with the **START/PAUSE** button.

At the end of the wash program the selected drying cycle will start.

If a washing program is not compatible with automatic drying selected, this function will not be activated.

If you exceed the maximum dryable load of laundry indicated in the program table, the laundry may not be dried satisfactory.

Only perform a drying cycle:

- Turn the **"SMART RING"** directly to the dedicated icon, at the program selection stage, to start one of the available drying cycles.
- Press the **"SET"** button and select through the **"SMART RING"** the most suitable drying program depending on the fabric (see section for details).
- Press the **"SET"** button again to confirm and turn the **"SMART RING"** at the desired degree of drying (except for the wool drying cycle).
- Confirm by pressing the **"SET"** button again.
- Start with the **START/PAUSE** button.

CANCELLING THE DRYING PROGRAM

- To cancel the drying program, once it has begun, press the **"SET"** button for about **1 second**.
- Select the option through the **"SMART RING"** and confirm by pressing the **"SET"** button again

**WARNING:**

after cancelling the drying program, the cool down phase will begin and please wait for about 10/20 minutes before opening the door.

In order to ensure the correct operation of the appliance, it is advisable not to interrupt the drying phase unless it is absolutely necessary.

ZOOM function button

- By activating the "ZOOM" function through the dedicated button, each fabrics can be washed in less than 59 minutes in the programmes that include it (see programme table) while guaranteeing washing performance.
- With the exclusive "Mix Power Jet+" system the detergent is injected and immediately activated in the core of the fabrics, guaranteeing a deep washing result.

Setting BEFORE selecting one or more options

- After selecting the programme, press "ZOOM" to activate the function. The display shows the new information about the cycle.
- The options of the programme can be modified only in agreement with the new length of the programme.
- Press **START/PAUSE** to start washing.

Setting AFTER having selected one or more options

- Press "ZOOM" to activate the function. The display shows the new information about the cycle.

- The previously set options will be automatically upgraded to the new length of the programme and the **NON compatible ones** will be cancelled. The previously set temperature and spin levels will not be exceeded to safeguard the fabrics and for getting the best washing result in a shorter time.

- Press **START/PAUSE** to start washing.

In addition, the "ZOOM" function can be activated within 15 seconds from the start of the washing cycle.

- To deactivate the function, press "ZOOM" again (the previously set options will be reset).




 











In addition, the "ZOOM" function can be deactivated within 15 seconds from the start of the washing cycle.

CHILD LOCK

- The simultaneous press of "SET" and "ZOOM" buttons for about 3 seconds can lock the buttons. In this way, you can avoid involuntary or accidental modifications.
- The button lock can be cancelled by simply pressing the two activation buttons and turning the appliance off.

In case of power shortage while the washing machine is running, a special memory will keep the setting and, when powers come back, the machine will resume from when it had stopped.

Table of programmes

 PROGRAMME		 (MAX.) (see control panel)						1) 2)  °C (MAX.)			
		8+5kg		9+6kg		10+6kg			2		1
		Standard*	zOOM	Standard*	zOOM	Standard*	zOOM				
	COTTON STRONG 3) 4)	8	3,5	9	4	10	4,5	90°	●	●	(●)
	COTTON** 3) 4)	8	3,5	9	4	10	4,5	60°	●	●	(●)
	SYNTHETIC AND COLOURED 3) 4)	4	2,5	4,5	2,5	5	3	40°	●	●	(●)
	WOOL	2	2	2	2	2	2	40°	●	●	
	DELICATE 3)	2,5	2,5	2,5	2,5	2,5	2,5	40°	●	●	
	RINSE	-	-	-	-	-	-	-	△	●	
	DRAIN & SPIN	-	-	-	-	-	-	-			
	STEAM	1,5	1,5	1,5	1,5	1,5	1,5	-			
	HIGH HEAT	5	-	6	-	6	-	-			
	LOW HEAT	4	-	4,5	-	5	-	-			
	DRY WOOL	1	-	1	-	1	-	-			
	Position that you have to select when you want to enable remote control through the App (via Wi-Fi).										

Please read these notes:

- 1) Maximum load capacity of dry clothes, according to the model used (see control panel).
 - 2) When a program is selected, on the display is shown the recommended wash temperature that can be reduced (where allowed) by setting the TEMPERATURE option through the "SET" button. However it's not possible to increase this option beyond the maximum value given.
 - 3) Steam Function Available.
 - 4) Programmes for automatic drying.
- * Default program (without "ZOOM" option).
- The pre-wash option is available only by selecting the program through the App.

△ (Only for models with liquid detergent compartment)

When only a limited number of articles have stains which require treatment with liquid bleaching agents, preliminary removal of stain can be carried out in the washing machine.

Pour the bleach into the liquid bleach container, inserted into the compartment marked "2" in the detergent drawer, and set the special programme RINSE.

When this phase has terminated, switch off the appliance, add the rest of the fabrics and proceed with a normal wash on the most suitable programme.

INFORMATION FOR THE TEST LABORATORIES (Ref. EN 50229 Standards)

Washing

Use the programme ** with the maximum degree of soiling selected, maximum spin speed and a temperature of 60°C. Programme recommended also for test with a lower temperature.

Drying

First drying with A kg (a load consist: pillowcases and hand-towels) selecting the HIGH HEAT drying program, CUPBOARD DRY.

Second drying with B kg (a load consist: sheets and hand towels) selecting the HIGH HEAT drying program, CUPBOARD DRY.

Capacity (washing) (kg)	A (kg)	B (kg)
	First drying	Second drying
8	5	3
9	6	3
10	6	4

Programmes selection

To clean different types of fabrics and various levels of dirt, the washing machine has specific programs to meet every need of washing (see table of programmes).

COTTON STRONG

Made to have a perfect washing. The final spin at maximum speed gives more efficient removal.

COTTON

This program is suitable to clean normally soiled cotton laundry and it is the most efficient program in terms of combined energy and water consumptions for washing cotton laundry.

SYNTHETIC AND COLOURED

This programme allows you to wash different type's fabrics and different colours all together. The rotation movement of the drum and the water levels are optimized, both during the washing the rinsing phase. The accurate spin action, ensures a reduced formation of creases in the fabrics. Thanks to "Mix Power Jet+" technology, a complete washing cycle optimization is possible.



WARNING:

New coloured garments should be washed separately for at least 5 or 6 washes.

Certain large dark items such as jeans and towels should always be washed separately.

Never mix NON COLOURFAST fabrics.

WOOL

This program performs a wash cycle dedicated to the wool fabrics that can be washed in a washing machine, or the articles to be washed by hand.

DELICATE

This program has reduced periods of drum rotation during the cycle and is particularly suitable or washing delicate fabrics.

The wash cycle and rinses are carried out with a high level of water to ensure the best performance.

RINSE

This program performs 3 rinses with an intermediate spin (which can be reduced or excluded by using the appropriate button) . It is used for rinsing any type of fabric, for example after a wash carried out by hand.

DRAIN & SPIN

The program completes the drain and a maximum spin. It is possible to delete or reduce the spin with the SPIN option through the "**SET**" button.

STEAM

This program allows you to choose between three different intensities of steam treatments that are suitable for dry or wet clothes and according to fabric type:

- COTTON

This programme is suggested for cotton clothes. In the case of wet clothes (i.e. after washing) it is indicated to relax creases after spin, in the case of dry clothes it helps to reach the ideal moisture level for an easy ironing. Medium time.

- SYNTHETIC

This programme is suitable for synthetics and mixed clothes. In the case of wet clothes (i.e. after washing) it is indicated to relax creases after spin, in the case of dry clothes it helps to reach the ideal moisture level for an easy ironing. Medium time.

- REFRESH

Thanks to the steam action, the cycle lets to refresh and relax clothes' creases after use. The programme consists of a start phase in which the steam works and of a final one in which the excess moisture is removed to let a prompt use. This cycle is suitable for dry clothes.

The function is suitable for max 1,5 kg load.

DRYING



WARNING:

Dispensers used for concentrated powders and liquid detergents must be removed from the drum before commencing the tumble drying programmes.

The drum changes direction during the drying cycle to prevent the laundry from tangling and producing even more drying. Cool air is used during the last 10/20 minutes of the drying cycle to minimize creasing.

HIGH HEAT

High temperature drying programme recommended for cottons and linen items (always refer to the laundry care label).

LOW HEAT

Low temperature drying programme recommended for synthetics and mixed fibres (always refer to the laundry care label).

DRY WOOL

Low temperature drying programme, ideal to dry woollen clothes with maximum care and softness, reducing rubbing of fabrics

and avoid possible felting. It's suggested to reverse clothing before drying. Timing is related to the amount of the washing and the spin speed selected for the wash. The cycle is suitable for small loads up to 1 kg (3 sweaters).



APPAREL CARE

The wool drying cycle of this machine has been approved by "The Woolmark Company" for the drying of machine washable wool products provided that the products are washed and dried according to the instructions on the garment label and those issues by the manufacturer of this machine.

The Woolmark symbol is a Certification mark in many countries. M1715

Wi-Fi

Position that you have to select when you want to enable remote control through the App (via Wi-Fi). In this case, the start of cycle will take place through the App commands.

9. DRYING CYCLE

- Drying guidance advice is general, but practical experience of using the product will help you to achieve the best drying results.
- We recommend setting a lower drying time than indicated, when first using the appliance in order to establish the degree of dryness required.
- We recommend not drying fabrics that fray easily, such as rugs or garments with a deep pile, in order to avoid air duct clogging.
- We recommend that you sort the laundry by the following methods:

- By drying care symbols, which are displayed on the clothing labels

- Suitable for tumble drying.
- Tumble dry at high temperature.
- Tumble dry at low temperature only.
- DO NOT** tumble dry.

If the fabric does not have a care label, you should assume that it is not suitable for drying.

- By size and thickness

Whenever the wash load is bigger than the drying capacity, separate the clothes according to thickness (e.g. towels from thin underwear).

- By fabric type

Cottons/linen: towels, cotton jersey, bed and table linen.

Synthetics: blouses, shirts, overalls, etc. made of polyester or polyamide, as well as for cotton/synthetic mixes.

- Only dry pre-spun laundry.

The correct way to dry

- Open the door.
- Fill with the laundry, not exceeding the maximum drying load indicated in the programme table. For large items (e.g. sheets) or very absorbent items (e.g. towels or jeans), it is a good idea to reduce the load.
- Close the door.
- Select the more suitable drying program for your laundry (**HIGH HEAT, LOW HEAT, DRY WOOL**).
- Select the degree of dryness that you require:

EXTRA DRY

(suitable for towels, bathrobes and bulky loads).

IRON DRY

(that leaves the laundry ready for ironing).

CUPBOARD DRY

(for items that will be put away without ironing).

TIMED DRYING PROGRAMS

- 120 MINUTES
- 90 MINUTES
- 60 MINUTES
- 30 MINUTES

By selecting the wool drying programme, it's not possible to select a degree of dryness different from the default one.

- The washer dryer will calculate the time needed for drying and the level of moisture remaining in the laundry, according to the load and drying type selected.

- Check that the tap is turned on and that the discharge hose is positioned correctly.

**WARNING:**

Do not dry articles with special padding (e.g. quilts, quilted anoraks, etc.) and very delicate fabrics. If garments are drip/dry, load less items to prevent creasing.

- Press the **START/PAUSE** button (the display will show the drying time remaining).

The appliance calculates the time to the end of the selected programme based upon a standard loading. During the cycle, the appliance corrects the time according to the size and composition of the load.

During the drying phase the drum will accelerate to a higher speed to distribute the load and to optimize the drying performance.

In order to ensure the correct operation of the appliance, it is advisable not to interrupt the drying phase unless it is absolutely necessary.

AUTOMATIC WASHING/DRYING CYCLE

You cannot exceed the maximum dryable load of laundry indicated in the programme table, otherwise the laundry will not be dried satisfactory.

If you want a drying cycle to start automatically after washing, simply press the **"SET"** button on the desired washing cycle, set the desired degree of drying through the **"SMART RING"** in the drying position and start the cycle. At the end of the washing program, the set drying cycle will automatically start (see section **"DRYING SELECTION"**).

10. TROUBLESHOOTING AND WARRANTY

If you believe the washing machine is not working correctly, consult the quick guide provided below which includes some practical tips on how to fix the most common problems.

ERROR CODE FORMAT

- **Models with a display:** the error is shown by a number preceded by the letter “E” (example: E2 = Error 2).
- **Models without display:** an error is shown by a sequence of flashes of every LED. The error code is shown by the number of flashes followed by a pause of 5 seconds (example: two flashes – pause 5 seconds – two flashes – repeating = Error 2).

Error shown	Possible causes and practical solutions
E2 (with display) 2 flashes of the LEDs (without display)	The machine cannot load water.
	Make sure the water supply tap is open.
	Make sure the water supply hose isn't bent, kinked or trapped.
	Make sure the drain pipe is at the proper height (see installation section).
E3 (with display) 3 flashes of the LEDs (without display)	Close the water supply tap, unscrew the filler hose from the back of the washing machine and make sure the “anti-sand” filter is clean and not blocked.
	The washing machine does not drain water.
	Make sure the filter is not clogged.
E4 (with display) 4 flashes of the LEDs (without display)	Make sure the drain hose isn't bent, kinked or trapped.
	Make sure the home drainage system is not blocked and is allowing water to flow through without obstruction. Try to drain the water in the sink.
E7 (with display) 7 flashes of the LEDs (without display)	There is too much foam and/or water.
	Ensure the correct amount of detergent is being used and the detergent is designed for use in a washing machine.
Any other code	Door problem.
	Make sure the door is correctly closed.
	Make sure the clothes inside the drum are not preventing the door from closing fully.
	If the door is locked, turn off and unplug the washing machine from the electrical supply socket, wait 2-3 minutes and reopen the door.
	Turn off and unplug the washing machine, wait a minute. Turn on the machine and restart a program. If the error occurs again contact an Authorised Customer Service Centre directly.

OTHER ANOMALIES

Problem	Possible causes and practical solutions
<p><i>The washing machine does not work / start</i></p>	Make sure the product is plugged into a working supply socket.
	Make sure power is on.
	Make sure the wall socket is working, testing it with another appliance such as a lamp.
	The door may not be correctly closed: open and close it again.
	Check whether the required program was correctly selected and the start button pressed.
<p><i>Water leaked on the floor near the washing machine</i></p>	Make sure the washing machine is not in pause or time delay mode.
	This may be due to a leak from the seal between the tap, supply hose and fill valve; in this case, replace it and tighten the hose connections correctly.
<p><i>The washing machine does not spin</i></p>	Make sure the front filter is correctly closed.
	<p>The machine is fitted with a detection system that protects the load and product from damage if the load is not balanced before spinning. This may result in:-</p> <ul style="list-style-type: none"> • The machine attempts to balance the load, increasing the time of spin. • Reduction of the speed of spin to decrease vibrations and noise. • The spin cycle aborting to protect the machine and load. <p>If this is experienced remove the load de-tangle it, reload it and restart the spin program.</p>
	This could be due to the fact that water has not been completely drained: wait a few minutes. If the problem persists, see Error 3 section.
	Some models include a "no spin" function: make sure it is not selected.
	Check which options are selected and their effect on the spin cycle.
<p><i>Strong vibrations / noises are heard during the spin cycle</i></p>	Excessive detergent can impede the spin cycle, ensure the correct amount of detergent is being used.
	The washing machine may not be fully levelled: if necessary, adjust the feet as indicated in the specific section.
	Make sure transport screws, rubber bungs and spacer tubes were removed. Make sure there are no foreign objects inside the drum (coins, hinges, buttons, etc...).

The standard manufacturer warranty covers faults caused by electrical or mechanical faults in the product due to an act or omission of the manufacturer. If a fault is found to be caused by factors outside the product supplied, miss-use or as a result of the instructions on use not being followed, a charge may be applied.

The use of ecological detergents without phosphates may cause the following effects:

- **cloudier rinse drain water:** This effect is tied to the suspended zeolites which do not have negative effects on rinse efficiency.
- **white powder (zeolites) on laundry at the end of the wash:** this is normal, the powder is not absorbed by fabric and does not change its colour.
To remove the zeolites, select a rinse programme. In the future consider using slightly less detergent.
- **foam in the water at last rinse:** this does not necessary indicate poor rinsing. Consider using less detergent in future washes.
- **abundant foam:** This is often due to the anionic surfactants found in the detergents which are hard to eliminate from laundry.
In this case, do not re-rinse to eliminate these effects: it will not help at all.
We suggest conducting a maintenance wash using a proprietary cleaner.

If the problem persists or if you suspect a malfunction, immediately contact an Authorised Customer Service Centre.

It is always recommended to use original spare parts, that are available at our Authorised Customer Service Centres.

Warranty


The product is guaranteed under the terms and conditions stated on the certificate included with the product. The warranty certificate must be duly filled in and stored, so as to be shown to the Authorised Customer Service Centre in case of need. Proof of purchase must be made available at the time of any warranty related repair.

By placing the  mark on this product, we are confirming compliance to all relevant European safety, health and environmental requirements which are applicable in legislation for this product.

The manufacturer declines all responsibility for any printing errors in the booklet included with this product. Moreover, it also reserves the right to make any changes deemed useful to its products without changing their essential characteristics.

WIRELESS PARAMETERS

Parameter	Specifications (Wi-Fi)	Specifications (Bluetooth)
Wireless Standard	802.11 b/g/n	Bluetooth v4.2
Frequency range	2,412 GHz. - 2,484 GHz.	2,412 GHz. - 2,484 GHz.
Max Trasmit Power	802.11b, DSSS 1 Mbps = +19.5 dBm	Basic data Rate: RF Transmit Power (Typ): +4 dBm Enhanced data Rate: RF Transmit Power (Typ): +2 dBm BLE RF Transmit Power (Typ): +7.5 dBm
	802.11b, CCK 11 Mbps = +18.5 dBm	
	802.11g, OFDM 54 Mbps = +18.5 dBm	
	802.11n, MCS7 = +14 dBm	
Minimum Receiving Sensivity	802.11b = 1024 bytes, -80 dBm	Basic data Rate: Sensivity @ 0.1% BER: -98 dBm Enhanced data Rate: Sensivity @ 0.01% BER: -98 dBm BLE Sensivity @ 0.1% BER: -98 dBm
	802.11g = 1024 bytes, -70 dBm	
	802.11n = 1024 bytes, -65 dBm	
	802.11n HT40 = 1024 bytes, -65 dBm	

With this the **Candy Hoover Group Srl**, declares that this appliance marked with  complies with the essential requirements of the Directive 2014/53/EU. To receive a copy of the declaration of conformity, please contact the manufacturer at: www.candy-group.com

